


ATTENTION!!!

Brackets holding unit in place must be removed before attempting to remove unit from skid!

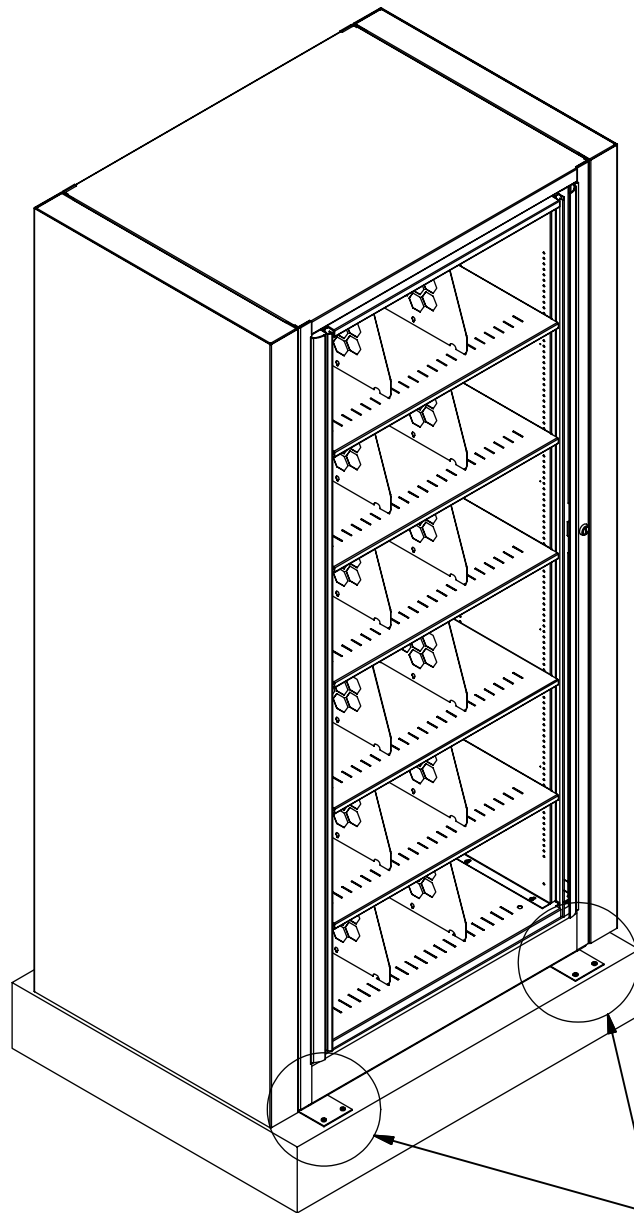

Remove two brackets
on each side of unit!